# 0445020273 Fuel Pump CP3S3 Series Technical File

SKU1: Y1Z200445020273

SKU2: L30000B2B020273



SHADDATT

SPERMIT

SPERME

SPACE

SPUTTER

SPARAT

SPARAT

# 0445020273 Fuel Pump CP3S3 Series Technical File SPREAT

LI PRIMAL PRIMAL

SPASSAR

S18-255

 $\lesssim 0^{(0)}$ 

STUDAT

# Content

Content,
1. 0445020273 Fuel Pump Introduction
1.1. 0445020273 Fuel Pump Basic Information2
1.2. 0445020273 Fuel Pump Common Part Number2
1.3. 0445020273 Fuel Pump Parameter2
1.4. 0445020273 Fuel Pump Specifications And Dimensions2
1.5. 0445020273 Fuel Pump Quality Control
1.6. 0445020273 Fuel Pump Customized Service
1.7. 0445020273 Fuel Pump Packing List and Package Size
1.8. 0445020273 Fuel Pump Testing Standard and Certificate5
1.9. 0445020273 Fuel Pump Warranty Instructions
1.10. 0445020273 Fuel Pump Manufacturer7
2. 0445020273 Fuel Pump Technical Support
2.1. 0445020273 Fuel Pump Coding Position7
2.2. 0445020273 Fuel Pump Installation8
2.3. 0445020273 Fuel Pump Not Working Normally9
2.4. 0445020273 Fuel Pump Causes of Being Damaged
2.5. 0445020273 Fuel Pump Technical Support Obtaining Methods
3. 0445020273 Fuel Pump Purchase and Delivery10
3.1. 0445020273 Fuel Pump Purchase Payment Term10
3.2. 0445020273 Fuel Pump Main Sales Markets10
3.3. 0445020273 Fuel Pump Declaration Requirements
3.4. 0445020273 Fuel Pump Shipping Ways
3.6. 0445020273 Fuel Pump Logistics Time for Destination Out of China's Areas10
3.7. 0445020273 Fuel Pump Packing11
4. 0445020273 Fuel Pump Storage Standard12
5. Company Information
5.1. Company Introduction
5.2. Salesmen's Contact Information14
6. Copyright Statement
21. 21. 21. 21. 21. 21. 21. 21. 21. 21.

 $\otimes^{(0)}$ 

. 1887 V

Mob/Whatsapp: +86 13410541523 Email : ruby@shumatt.com © 2025 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133 Website : www.shumatt.com

0445020273 Fuel Pump CP3S3 Series Technical File

# 1. 0445020273 Fuel Pump Introduction

#### 1.1. 0445020273 Fuel Pump Basic Information

Title	0445020273 Fuel Pump CP3S3 Series	Quality
SKU1 SKU1	Y1Z200445020273	Original New
SKU2	L30000B2B020273	Re-manufactured

# 1.2. 0445020273 Fuel Pump Common Part Number

(1)	Fuel Pump Exchange Information	200

Fuel pump Number			Universa	Ар	Applicable Models			OE Number				
S.C.	Sec.	Sec.	$\mathcal{G}_{\mathcal{O}}$	1. A.	- 45° - 4	1	Stor	Stor.	Sec.	Sec.	Sec.	30
0445020273			0445020175		Cummins		610800080979					
	St. all	The soft		at in the	17800 17	. all	i . di	St. and		The second	t in the	£5
1000	1000	100	12	1999 - 1999 - 1999 - 1999 - 1999 - 1999 - 1999 - 1999 - 1999 - 1999 - 1999 - 1999 - 1999 - 1999 - 1999 - 1999 -	10000	A COLOR	- States	-02	-0.90	1000	1000	1990

#### (2) Fuel Pump Application Information

Model	Engine number	Production date	Power KW	Horsepower	Displacement	Cylinders	Power supply
Cummins	ALTER CALLER	State State	1771 1887	an sharing	ANT ANT	1.205 V	1700

# (3) Fuel Pump Common Writing

0445020273, 0 445 020 273, 0445 020 273, 0445020 273, 0 445 020273, 0 445020273, 610800080979

#### 1.3. 0445020273 Fuel Pump Parameter

Adaptation System: Common Rail System Fuel Pump Series: CR/CP3S/L110/30-789S Fuel Pump Type: High Pressure Pump,CR System Fuel pump pressure: 1,600.0 bar

#### and the and the 1000 518-55 1.4. 0445020273 Fuel Pump Specifications And Dimensions

Fuel Pump Size: 26 cm\*24 cm \*17 cm

Fuel Pump Net Weight: 7.5 kg 33 M

Fuel Pump Gross Weight: 7.6 kg

Fuel Pump Quality: Re-manufactured

Fuel Pump Package Size: 28 cm\*26 cm \*19 cm

Fuel Pump Type: High Pressure Pump Fuel Pump

Fuel Pump MOQ: 1 Pieces

#### 1.5. 0445020273 Fuel Pump Quality Control

(1) Fuel Pump Testing

17 Faller and the ant in All fuel pump parts are tested for electrical characteristics, accuracy, high temperature, low temperature, pressure resistance, leakage, durability, and various working conditions.

Mob/Whatsapp: +86 13410541523 Email : ruby@shumatt.com © 2025 Shenzhen Shumatt Technology Co., Ltd

# (2) Fuel Pump Assembling

In addition, the fuel pump production and installation process quality control, our company strictly follows the standard product installation data and product installation steps for installation, such as fuel pump stroke test, fuel pump solenoid valve tightening torque.

#### (3) Fuel Pump Inspection

The fuel pump factory inspection is tested three times: full inspection, random inspection, and batch inspection. The fuel pump factory inspection will use different brands of test benches to test the same fuel pump for a total of no less than three times. The fuel pump installation and testing environment is UTRIT' completed in a dust-free workshop.

# 1.6. 0445020273 Fuel Pump Customized Service

(1) Fuel Pump Customized Service Coverage: Meet the customized needs of OEM manufacturers for shell lettering, logo engraving, fuel Pump internal packaging, fuel pump external packaging and labels customized, etc.



# (2) Fuel Pump Customized Service Requirements:

The sales of customized fuel pump products shall not be less than 10 units. The packaging of customized fuel pumps shall not be less than 1000 pieces.

Customized products involve the need of specify logo, the OEM manufacturer needs to provide trademark STR. STR. - Aller authorization and the sample of logo image file.

A Once the customized fuel pump is sold, it cannot be returned or exchanged if there are no quality SPERIMENT SPRINT SPREAT SPRING problems.

# 1.7. 0445020273 Fuel Pump Packing List and Package Size

. and the

	p Spare Parts List	Stand I ackage size	ANDAL SANDAL SANDAL SA
No.	1	2	3
SHUDATT SHUD Image SHUDAT SHUD		States 1 Sta	
Name	Fuel Pump Assembly	Blue Anti-rust Bag	Inner lining
Description	Fuel Pump Assembly Number: 0445020273	Prevent fuel pump from rusting	Prevent fuel pump from being damaged by external force
No.	4	5	6

#### na tille barna tille. nto t 🕬

Mob/Whatsapp: +86 13410541523 Email : ruby@shumatt.com © 2025 Shenzhen Shumatt Technology Co., Ltd

and the

and the

Tel: +8675523215133 Website : www.shumatt.com

. all a

# 

# Shenzhen Shumatt Technology Co., Ltd

Name	Fuel pump Packaging Box	White label	Fuel Pump Protective
.30	300 F F F300 F F 6 5 3	-34	Cover

Minors are prohibited from using the fuel pump assembly, O-rings, fuel inlet protective cover, fuel pump housing cover, fuel return cover, VCI anti-rust bag, and bubble bag to avoid personal injury.
O-rings and repair kits are disposable installation accessories and need to be replaced for reinstallation.
Fuel inlet protective cover, fuel pump housing cover, and fuel return cover are recyclable accessories and can be recycled.

VCI anti-rust bag and bubble bag are non-degradable materials. Please dispose of them properly after use.

The fuel pump and installation parts guide tube should be treated with appropriate sealing fuel during installation.

(2) Fuel Pump Box Size stant st

SATING SATING PATING SATING PATING PATING

NATIONAL RADIAL REPORT REPORT REPORT REPORT RADIAL RADIAL RADIAL RADIAL RADIAL RADIAL REDUCT RADIAL REPORT RADIAL

SPLOOPT SP

 $\otimes^{[0]}$ 

 $\otimes^{(i)}$ 

SAVERAL SA

The The Area International Area Area

Mob/Whatsapp: +86 13410541523 Email : <u>ruby@shumatt.com</u> © 2025 Shenzhen Shumatt Technology Co., Ltd Tel: +8675523215133 Website : <u>www.shumatt.com</u>

and a second



No.	Name	Fuel Pump Packing Size (cm)
1	Fuel Pump Box	32*23*28
Aller	white white white white white	WIN WIN WIN WIN WIN WIN WIN W

#### 1.8. 0445020273 Fuel Pump Testing Standard and Certificate

Shumatt can provide the factory quality inspection test report of each fuel pump to ensure that each fuel pump delivered meets the engine performance indicators.

STATEST STRATTS STRATT STREET SPURAT 98<sup>9,55</sup> çê<sup>şe</sup>  $\phi_{i}^{(0)}$ SPERMENT 592.57% SANTA SPLINET 51<sup>9,271977</sup> SPUDRI SHUMPT SPATE S. B. B. B. 57<sup>1,108</sup> 3.<sup>978</sup> Ş. SPASSING SHUDAT SREPA 38<sup>308</sup> - ANDER SAUGH S.R. S. T. S. A.S. 3<sup>9,578</sup> A.S.  $\wp_{i}^{(0)}$ SPLIGAT SPRIMATY SPURAT SPLEEN SPERIMIT SPARSE SPADAT 5)<sup>9,20</sup>977 SPLONT SPL STR  $\otimes^{\mathbb{R}^{|\widehat{\mathcal{G}}|}}$  $\mathcal{O}^{[0]}$ SPAIRS SI<sup>NSON</sup> SPECIF STATION STATE 572.25  $\otimes \tilde{V}^{(i)}$ STRATIST SPARST STRUCTURE SPERMIT SPARAT SPREAT SPREENT SPAIRST SPACE  $\phi \delta^{(i)}$ . - 18<sup>45</sup> . and the - 109<sup>071</sup> . 199<sup>5)</sup>

Mob/Whatsapp: +86 13410541523 Email : <u>ruby@shumatt.com</u> © 2025 Shenzhen Shumatt Technology Co., Ltd



#### 1.9. 0445020273 Fuel Pump Warranty Instructions

# (1) Product Warranty Conditions and Instructions

It is necessary to provide pictures, videos, or test reports detected by the fuel pump inspection equipment when the fuel pump is abnormal during use as evidence to feed back to the salesman. Abnormal conditions are properly explained such as: 1.Smoke, 2. Engine shake, 3. Difficulty starting the engine, 4. Engine noise, 5. Fuel leakage etc. 1.9<sup>56</sup>

 $S^{0,2}$ 

and R

#### (2) Fuel Pump Warranty Coverage

Within 15 days after customer receives the 0445020273 fuel pump, if there is a performance failure and the product has no appearance damage, customer can choose to replace it or repair it;

If the 0445020273 fuel pump has performance problems during the warranty period (6-12 months), and it is confirmed that it is product's problems after testing, you can contact our salesmen to replace the same model or a reworked product with the same performance for free;

If the fuel pump house has obvious scratches, it can only be repaired and it will be returned as it is if the product is confirmed to be fault-free.

Tips: For products not covered by warranty, our company can provide paid maintenance services. For products after paid repaired, the same performance problem will have a free warranty period within 3 months from the date of repairing.

#### (3) Fuel Pump Out of Warranty Coverage

Mob/Whatsapp: +86 13410541523 Email : ruby@shumatt.com © 2025 Shenzhen Shumatt Technology Co., Ltd

① The warranty period has expired and is not covered by the warranty.

2 Fuel pump failure caused by high temperature, high pressure, humidity, rain and snow, salinealkali land, earthquake, and abnormal environment.

③ The customer privately disassembles or repairs the fuel pump, causing the fuel pump to be damaged.

④ Fuel pump damage caused by human factors (throwing, strong magnetic field magnetization, arson).

⑤ Fuel pump failure or fuel pump damage caused by non-fuel pump design, technology, manufacturing, quality and other issues.

6 Fuel pump failure caused by system pressure exceeding the approved system pressure.

⑦ Fuel pump failure caused by system voltage exceeding the approved voltage.

8 Impurities (water, lead, aluminum powder, iron powder, sulfide) in the system fuel exceed the standard requirements and cause fuel pump failure.

In Fuel pump failure caused by not installing according to the tightening torque specified in the vehicle engine maintenance manual (tightening torque is too large or too small).

1 Fuel pump failure caused by failure to follow the installation angle specified in the vehicle engine maintenance manual.

11 Fuel pump failure caused by failure to comply with the cleaning requirements specified in the vehicle engine maintenance manual.

12 Fuel pump failure caused by failure to replace wearing parts in accordance with the requirements specified in the vehicle engine maintenance manual.

13 Fuel pump failure is caused by not following the intake system clearance and exhaust system clearance requirements specified in the vehicle engine maintenance manual.

14 Fuel pump failure is caused by not replacing the wearing parts of the fuel intake system and the clearance between the fuel intake system pipeline and the fuel pump connection specified in the vehicle engine maintenance manual.

#### 1.10. 0445020273 Fuel Pump Manufacturer

 $ca^{h,p_{n}}$ 

Fuel Pump Manufacturer: Shenzhen Shumatt Technology Co., Ltd

#### 2. 0445020273 Fuel Pump Technical Support

# 2.1. 0445020273 Fuel Pump Coding Position

(1) Example: The fuel pump code is as follows:

S	erial numb						Name	2			
appen appen	Â	S.	S. Same	3000	25000	Nam	eplate, lo	ogo, code	1200	Stores and	$\otimes_{\mathcal{C}}$
Strant, Strant	NT SPRINT	572.005	SPLEON	T SPECIA	STREET.	SPLINT	SHURST	SPASSART ST	1.5555	512.005	a Ste
SHAREFT SHARE	STRANST	S. A. S. S.	519200	STREET	STRUCTURE STRUCTURE	SPRINT	STATION	STATIST'S	4.50 <sup>577</sup>	5191.005	c Str
and and	diad	i Sala	d and	i	S. All	3	3. 	. Street		Star	¢

Mob/Whatsapp: +86 13410541523 Email : <u>ruby@shumatt.com</u> © 2025 Shenzhen Shumatt Technology Co., Ltd





# 2.2. 0445020273 Fuel Pump Installation

-15 PT

(1) 0445020273 Fuel Pump Installation Precautions:

P.ST.ST.S. 12000 all and a second f A The replacement of the fuel pump must strictly follow the electrical system, the approved pressure of

the low-pressure fuel intake system, the approved pressure of the high-pressure fuel circuit system, and fuel system replacement consumables requirements (including the low-pressure fuel circuit system filter and the high-pressure fuel circuit) specified in the vehicle engine maintenance manual.

a SP . a. C. C. A Replacement of wearing parts of the fuel system, cleaning requirements for the connection between

the fuel system and the fuel pump, the fitting clearance of the fuel pump connection, the installation angle and tightening torque of the fuel pump, the fitting clearance of the intake system, and the fitting clearance of the exhaust system to ensure the service life of the engine and the normal operation of the fuel pump.

and the a 197 A When installing the fuel pump on the engine, it is necessary to clean the engine cylinder block, cylinder head and other parts connected to the fuel pump and ensure that they are clean and free of dust, carbon

deposits, water, rust spots, etc.

🐣 Failure to replace the new sealing ring gasket may lead to: fuel pump deformation, fuel leakage, air leakage, serious damage to the fuel pump, causing the fuel pump to break and cause engine damage.

The When installing the fuel pump on the engine, please carefully check that the parts related to the

installation of the fuel pump, such as the fuel pump pressure plate, screws, push rods and other accessories - 19 - 18 N - 199

Mob/Whatsapp: +86 13410541523 Email : ruby@shumatt.com © 2025 Shenzhen Shumatt Technology Co., Ltd

are not deformed, and strictly follow the operating procedures in the engine maintenance manual for installation.

A It is forbidden to expose the fuel pump for a long time in an environment with severe dust pollution and corrosion to iron products.

 $\mathcal{G}^{(i)}$ 

 $\mathcal{G}^{(i)}$ 

A It is forbidden to expose the fuel pump for a long time in a strong magnetic field environment.

# 2.3. 0445020273 Fuel Pump Not Working Normally

- (1) There is air in the fuel circuit of the engine fuel system.
- (2) The vehicle fuel pump supply system is abnormal.
- (3) The engine common rail system is leaking or the pressure limiting valve is damaged.
- (4) The wiring harness connecting the vehicle to the fuel pump is short-circuited, disconnected, or has poor contact.
- (5) The anti-rust fuel of the fuel pump solidifies after being left for a long time, causing the internal components to become stuck or the fuel holes to become clogged.

Before installing, carefully check whether other components in the common rail system except the fuel pump are damaged to prevent the fuel pump from not working properly after being replaced.

#### 2.4. 0445020273 Fuel Pump Causes of Being Damaged

- (1) Didn't operate properly according to engine maintenance manual during disassembly or installation, resulting in damage to the fuel pump.
- (2) The fuel used for the vehicle does not meet the standard cause damage to the fuel pump, such as: the
- water content in the fuel exceeds the standard, iron powder, aluminum powder, sulfide impurities exceed the standard, etc.
- (3) The engine is not regularly maintained according to the engine maintenance manual (please refer to the vehicle maintenance manual for the maintenance mileage). For example, failure to replace the lubricating fuel of the engine system for a long time will cause abnormal wear of the engine, excessive
- exhaust gas volume or a large amount of carbon deposits inside the engine. The filter is not replaced during maintenance or the replaced filter cannot reach the original filter standard. all above reasons can cause damage to the fuel pump.
- (4) The abrasion of the fuel pump produces iron powder and aluminum powder enter the fuel pump and cause damage to the fuel pump.
- (5) The deformation and abrasion of fuel tank result in iron powder or aluminum powder entering the fuel pump and causing damage to the fuel pump.
- (6) The fuel pump is damaged due to replacement or adjustment of the relevant parts of the fuel pump.
- For example, the valve clearance does not meet the standard after the engine is repaired, the replacement or modification of the wiring harness connected to the fuel pump fails to meet the original standard.
- (7) The engine is overheated and overloaded for a long-time working result in damage to the fuel pump.
- (8) The fuel pump will be damaged naturally at the end of its working life.

Mob/Whatsapp: +86 13410541523 Email : <u>ruby@shumatt.com</u> © 2025 Shenzhen Shumatt Technology

<sup>© 2025</sup> Shenzhen Shumatt Technology Co., Ltd

(9) The fuel pump is magnetized (fuel pump parts' magnetic exceeded) causing the fuel pump to not work SAUDE properly. alone alone

A Before replacing the fuel pump, please check the engine parts carefully according to the engine maintenance manual to avoid the fuel pump being damaged again after replacement.

#### 2.5. 0445020273 Fuel Pump Technical Support Obtaining Methods

(1) Fuel Pump Technical File, visit <u>http://shumatt.com</u> to get the technical file.
(2) Fuel Pump Technical Video

(2) Fuel Pump Technical Videos

Facebook: Follow https://www.facebook.com/hison.lito get technical support videos, and stay tuned for more information.

 $\mathcal{G}^{(i)}$ 

YouTube: https://www.youtube.com/channel/UCByyYBx7VjV mAfxh Hu-aw to get the technical videos, constantly follow can get more information.

Shumatt: Visit <u>http://shumatt.com</u> to get the technical videos.

(3) Fuel Pump Information Query Software

TruckBook Parts EPC APP, Android/Apple App Store download and install, visit http://shumatt.com to get PROFIL the download and installation tutorial at the

(4) Search the fuel pump test data through TruckBook Parts EPC APP.

# 3. 0445020273 Fuel Pump Purchase and Delivery

3.1. 0445020273 Fuel Pump Purchase Payment Term Payment Terms: T/T, PayPal, Alipay, WeChat

A Please contact our salesmen for specific payment information.  $S_{1}^{2,2}$  $S^{2,2}$ -97--98<sup>9</sup>0

# 3.2. 0445020273 Fuel Pump Main Sales Markets

Fuel Pump Main Sales Markets: Asia, Europe, North America, South America, Africa etc.

3.3. 0445020273 Fuel Pump Declaration Requirements

Shumatt can assist customers to provide the following documents for import customs clearance: contract, invoice, packing list, bill of lading, insurance policy, certificate of origin, etc.  $\mathcal{C}^{0,2}$  $S^{0,0}$ 

# 3.4. 0445020273 Fuel Pump Shipping Ways

Destination in China Areas: SF Express, Debon Express, the corresponding logistics company can be provided according to customer requirements in special cases.

Destinations Out of China's Areas: DHL, UPS, FedEx, TNT air, ocean or other shipping methods required -Star by customers.

# 3.5. 0445020273 Fuel Pump Lead Time

Lead Time: Send out within 3 – 7 working days after receiving payment (Except for special products and special cases).

3.6. 0445020273 Fuel Pump Logistics Time for Destination Out of China's Areas

Mob/Whatsapp: +86 13410541523 Email : ruby@shumatt.com © 2025 Shenzhen Shumatt Technology Co., Ltd



DHL Logistics Time:		5 5 S	at at		-55	15 IS	_
Country or Region of Departure	Hong Kong, China	Other Countries or Regions of Asia	Australia and New Zealand	Europe	America	Other Countries	3 <sup>96</sup>
China's Mainland	7 Days	7 Days	8 Days	8 Days	8-12 Days	7-10 Days	9 <sup>81</sup>

SPATIST

SHERE'S SHERE'S

#### STRUCT -92<sup>030</sup> UPS Logistics Time: Country or Region of Departure: China's Mainland

Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time
Japan	3 Days	UK	5-7Days	Egypt	5-7 Days
Turkey	5-7 Days	Singapore	3 Days	Switzerland	5-7 Days
Bahrain	5-7 Days	Latvia	7-10 Days	New Zealand	7-10 Days
Sri Lanka	5-7 Days	Thailand	3 Days	Austria	5-7 Days
Romania	5-7 Days	Vietnam	3-5 Days	Estonia	5-7 Days
Malaysia	3-5 Days	Israel	5-7 Days	Mexico	7-10 Days
France	5-7 Days	America	5-7 Days	United Arab Emirates	5-7 Days
Italy	5-7 Days	Netherlands	5-7 Days	Bengal	7-10 Days
Lebanon	5-7 Days	Philippine	3-5 Days	Greece	7-10 Days
South Korea	3 Days	Spain	5-7 Days	Myanmar	5-7 Days
Canada	5-7 Days	Germany	5-7 Days	Saudi Arabia	7-10 Days
Portugal	5-7 Days	Australia	5-7 Days	South Africa	7-10 Days
Denmark	5-7 Days	Belgium	5-7 Days	Ukraine	7-10 Days
India	7-10 Days	Qatar	7-10 Days	Poland	5-7 Days
Indonesia	3-5 Days	Morocco	7-10 Days	Pakistan	7-10 Days
Kuwait	7-10 Days	en al al an a	st <sup>eren</sup> / st <sup>eren</sup>	shill be shi	A see a

A The logistics time is for reference only and is subject to the actual arrival. and a star and a star and a star ald" ald" ald

# 3.7. 0445020273 Fuel Pump Packing

Carl I 1000 11900 Domestic Express Packaging: Usually wrapped in waterproof scotch tape, such as picture No. 1. International Express Packaging: Wrapped with waterproof yellow tape After wrapping the black protective film, such as picture No. 2.

Pallet Shipping: Use fumigation free and recycling trays that meet export requirements, and use white wrapping protective film to wrap and bind with cable ties for the outside, such as picture No. 3,  $\otimes^{[0]}$ also, the products can be packaged according to customers' requirements.

A The packing tray is made of plastic and can be recycled.

A Transparent tape, yellow tape, black wrapping protective film, white wrapping protective film are non-degradable materials, please dispose of them properly.

A Minors are prohibited from using transparent tape, yellow tape, black wrapping protective film,

Mob/Whatsapp: +86 13410541523 Email : ruby@shumatt.com © 2025 Shenzhen Shumatt Technology Co., Ltd Tel: +8675523215133 Website : www.shumatt.com

STT SPARATT SPARATT SPARATT



# 4. 0445020273 Fuel Pump Storage Standard

#### (1) Choose a Suitable Storage Place

The warehouse and cargo yard where the fuel pump is stored should be kept clean and dry, and away from the factory buildings that generate harmful gases and dust; do not mix with acids, alkali, salt, and other substances; the storage place should have a good drainage system; the cargo yard should be flattened with gravel or furnace ash etc. to enhance the water permeability of the surface layer to keep the reservoir area dry.

#### (2) Strict Requirements of Warehousing

Strict inspections should be carried out when the fuel pumps are put into storage, the surface cleaning work should be done well to remove water traces, fuel stains, ashes, and other dirt, remove the rust and do anti-rust treatment in time. Packaged fuel pumps must be protected from damage.

175

100

125

#### (3) Keep The Warehouse Dry And Preventing Moisture

The relative humidity is usually below 70% for the fuel pumps placed in the room, and the corrosion of

Mob/Whatsapp: +86 13410541523 Email : <u>ruby@shumatt.com</u> © 2025 Shenzhen Shumatt Technology Co., Ltd Tel: +8675523215133 Website : www.shumatt.com

10 a

1. 18 C

#### the fuel pumps is significantly reduced.

di k Fuel pumps must be stored in the warehouse, and they are forbidden to store in the same warehouse with commodities with high water content. The Party of the Party of the States . STORE C STATE.

#### (4) Stack Properly

After the fuel pump is exposed to rain, the corrosion rate will increase significantly. The purpose of sealing is to isolate the fuel pump from rainwater and humid air, so the warehouse window should be 58.50 checked in time to avoid rainwater entering the warehouse.

If the fuel pump package is damaged, it should be repaired or replaced; when the package is damp, the packaging material should be dried; if the original anti-corrosion and fuel applied at the factory is found to be damaged or dried up, it should be cleaned and re-applied fuel in time.

It is forbidden to leave the fuel pump exposed in the air for a long time

It is forbidden to store acids, alkalis, salts, and other substances together with the fuel pump. Star Store

The unpacked fuel pump must be rust-proof during secondary storage.



Mob/Whatsapp: +86 13410541523 Email : ruby@shumatt.com © 2025 Shenzhen Shumatt Technology Co., Ltd

Email: ruby@shumatt.com

Website: www.shumatt.com - 33<sup>,00</sup> 1 al 1

SHEEDITT Shenzhen Office: 11-12, Floor 14, Building 13, Qinchengda Building, Exit A, Honglang North Subway Station, Bao'an District, Shenzhen, China's Mainland

SPARAT

Shenzhen Office: Exit C, Qiao Touxi Metro Station, NO. 66 Chongqing Road, Fuhai Avenue, Bao'an District, Shenzhen, China Mainland -32

Hong Kong Office: Jianfa Street Industrial Zone, Tuen Mun, New Territories, Hong Kong, China

After-sales Service Address: Please contact our salesmen to obtain and provide the corresponding product maintenance reasons (Reference: <u>1.9. 0445020273</u> Fuel Pump Warranty Instructions)

No.	Name	WeChat/WhatsApp	Email
1	Ruby	+86-13410541523	ruby@shumatt.com
<b>- 2</b> 3% <sup>00</sup>	Share Show Show Sh	+86-18025299821	sales@shumatt.com
3	Rebecca	+86-18025349821	sales01@shumatt.com
4.00	Janny	+86-18028749821	sales02@shumatt.com
5	Sam	+86-13316859821	Sales8@shumatt.com
6	Natalie Natalie	+86- 18938945856	sales15@shumatt.com
7	Ada 🤷 🕫	+86-1342286353	sales5@shumatt.com
8	Hison Li	+86-18318811871	web@shumatt.com
<b>- 9</b> ,00	Mecca	+86-18938948618	sales11@shumatt.com
10	Eric	+86 18319033618	sales3@shumatt.com
<b>1<u>1</u>,000</b>	Wayne ( Joaquín en español )	+86-13316959821	wayne@shumatt.com
12	Sylvia	+86 18312499884	sales6@shumatt.com
- All	Visit http://shumatt.co	m to obtain the latest inforr	nation of salesmen
	PS: Shumatt's sales	men's emails are all end with	eshumatt.com
- All	an shann shann shann sh	THE SHARE SHARE SHARE	- 214-200 - 214-200 - 214-200 - 214-200 - 2

5.2. Salesmen's Contact Information


#### 6. Copyright Statement

a The The The The The The 65 15 T The copyright of any contents (including but not limited to parameters, data, text, charts, images, sounds, or videos, etc.) provided in "0445020273 Fuel Pump CP3S3 Series Technical File" belong to Shenzhen Shumatt Technology Co., Ltd. Without the prior written permission of Shenzhen Shumatt Technology Co., Ltd., you are not allowed to modify any contents in "0445020273 Fuel Pump CP3S3 Series Technical File" in any way. At the same time, any conditions to spread, repost, display the contents of "0445020273 Fuel Pump CP3S3 Series Technical File" should indicate that the cited article is from Shenzhen Shumatt Technology Co., Ltd., Any actions failure to follow above conditions to use "0445020273 Fuel Pump 

Mob/Whatsapp: +86 13410541523 Email : ruby@shumatt.com © 2025 Shenzhen Shumatt Technology Co., Ltd Tel: +8675523215133 Website : www.shumatt.com

- 15 C -

*CP3S3 Series Technical File*" will violate the "*Copyright Law of the People's Republic of China*" and other laws and regulations and the provisions of relevant international conventions.

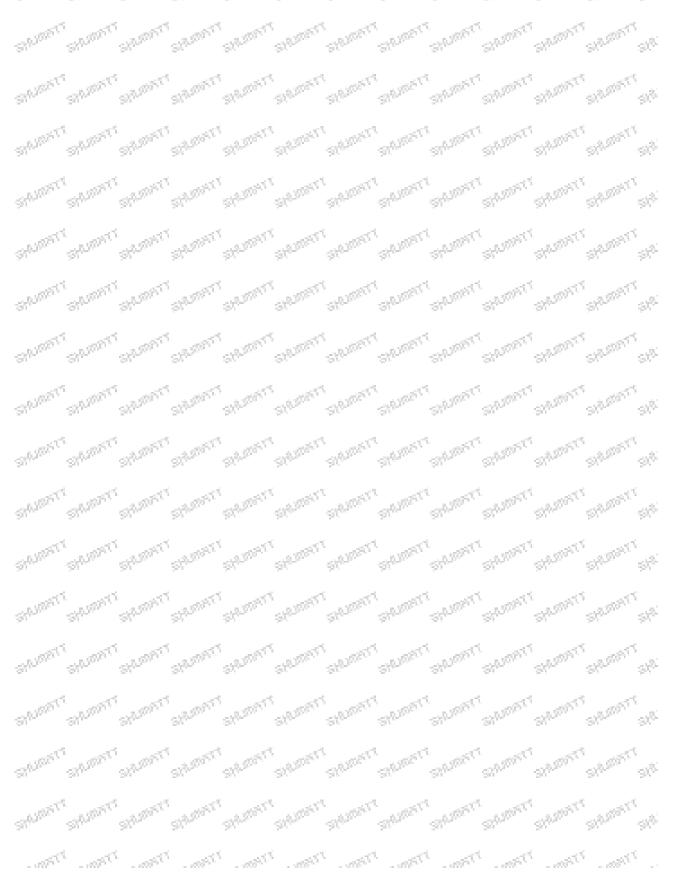

Mob/Whatsapp: +86 13410541523 Email : <u>ruby@shumatt.com</u> © 2025 Shenzhen Shumatt Technology Co., Ltd