

**095000-0801 Injector Control Valve 295040-1211 Technical File****SKU:G1T22950401211**

**095000-0801 Injector Control Valve 295040-1211 Technical File****Content**

1. 095000-0801 Injector Control Valve 295040-1211 Introduction .....	2
1.1. 095000-0801 Injector Control Valve 295040-1211 Basic Information .....	2
1.2. 095000-0801 Injector Control Valve 295040-1211 Common Part Number .....	2
1.3. 095000-0801 Injector Control Valve 295040-1211 Specifications and Dimensions .....	2
1.4. 095000-0801 Injector Control Valve 295040-1211 Quality Control .....	2
1.5. 095000-0801 Injector Control Valve 295040-1211 Customized Service .....	错误！未定义书签。
1.6. 095000-0801 Injector Control Valve 295040-1211 Packing List .....	3
1.7. 095000-0801 Injector Control Valve 295040-1211 Lettering Detail's Display .....	错误！未定义书签。
1.8. 095000-0801 Injector Control Valve 295040-1211 Thickness Measurement Tool's Introduction .....	4
1.9. 095000-0801 Injector Control Valve 295040-1211 Thickness Measurement Methods .....	5
1.10. 095000-0801 Injector Control Valve 295040-1211 Warranty Instructions .....	7
1.11. 095000-0801 Injector Control Valve 295040-1211 Manufacturer .....	7
2. 095000-0801 Injector Control Valve 295040-1211 Technical Support .....	错误！未定义书签。
2.1. 095000-0801 Injector Control Valve 295040-1211 Inspection and Semi Ball Inspection .....	错误！未定义书签。
2.2. 095000-0801 Injector Control Valve 295040-1211 Level of Damage Inspection .....	错误！未定义书签。
2.3. 095000-0801 Injector Control Valve 295040-1211 Installation Steps .....	错误！未定义书签。
2.4. 095000-0801 Injector Control Valve 295040-1211 Technical Support Obtaining Methods .....	8
3. 095000-0801 Injector Control Valve 295040-1211 Purchase and Delivery .....	8
3.1. 095000-0801 Injector Control Valve 295040-1211 Purchase Payment Methods .....	8
3.2. 095000-0801 Injector Control Valve 295040-1211 Main Sales Markets .....	9
3.3. 095000-0801 Injector Control Valve 295040-1211 Declaration Requirements .....	9
3.4. 095000-0801 Injector Control Valve 295040-1211 Shipping Ways .....	9
3.5. 095000-0801 Injector Control Valve 295040-1211 Lead time .....	9
3.6. 095000-0801 Injector Control Valve 295040-1211 Logistics Time for Destination Out of China's Areas .....	9
3.7. 095000-0801 Injector Control Valve 295040-1211 Packing .....	10
4. 095000-0801 Injector Control Valve 295040-1211 Storage Standard .....	11
5. Company Information .....	11
5.1. Company Introduction .....	12
5.2. Sales-men's Contact Information .....	12
6. Copyright Statement .....	12

**095000-0801 Injector Control Valve 295040-1211 Technical File****1. 095000-0801 Injector Control Valve 295040-1211 Introduction****1.1. 095000-0801 Injector Control Valve 295040-1211 Basic Information**

Title	095000-0801 Fuel Injector Control Valve 295040-1211 China made new
SKU	G1T22950401211

**1.2. 095000-0801 Injector Control Valve 295040-1211 Common Part Number****(1) 095000-0801 Injector Control Valve 295040-1211 Application to Car Model Information**

Injector Part Number	Car Model	OE Number
095000-0801	SAA6D125E-3,PC450LC-7 11.0d	6156-11-3100

**(2) 095000-0801 Injector Control Valve 295040-1211 Part Number Common Writing**  
**295040-1211****1.3. 095000-0801 Injector Control Valve 295040-1211 Specifications and Dimensions**

Injector Control Valve's Size: **2cm\*2 cm \*2cm**

Injector Control Valve's Box Size: **4cm \*4cm \*4cm**

Injector Control Valve's Package Size: **8cm \* 8cm**

Injector Control Valve's Net Weight: **0.035kg**

Injector Control Valve's Gross Weight: **0.07kg**

Injector Control Valve's Quality: **China Made New**

MOQ: **4 Pieces**

**1.4. 095000-0801 Injector Control Valve 295040-1211 Quality Control****(1) 095000-0801 Injector Control Valve 295040-1211 Testing**

All 295040-1211 injector control valves are subjected to A-hole flow test, Z-hole flow test, precision test, high temperature test, low temperature test, pressure test, leakage test, durability test, and various working condition tests.

**(2) 095000-0801 Injector Control Valve 295040-1211 Inspection**

The factory inspection of 295040-1211 injector control valve is undergone three inspections - full inspection, random inspection, and batch inspection. Different brands of test benches are used to test 295040-1211 injector control valve for a total of no less than three times for factory inspection, and 295040-1211 injector control valve installation testing environment are progressed in dust-free workshop.

1.5. 095000-0801 Injector Control Valve **295040-1211** Packing List

(1) 095000-0801 Injector Control Valve **295040-1211** Spare Parts List

No.	1	2
Image		
Name	Injector Control Valve	Valve Plate Packaging Box
Description	Control valve part number: <b>295040-1211</b>	To protect the control valve from impacts and damage.
No.	3	4
Image		
Name	12-piece Valve Plate Packaging Box	Neutral VCI Anti - Rust Bag
Description	To protect the control valves from impact damage.	To prevent the control valves from rusting.

⚠ Minors are forbidden to use 295040-1211 control valve and control valve's box to avoid personal injury.

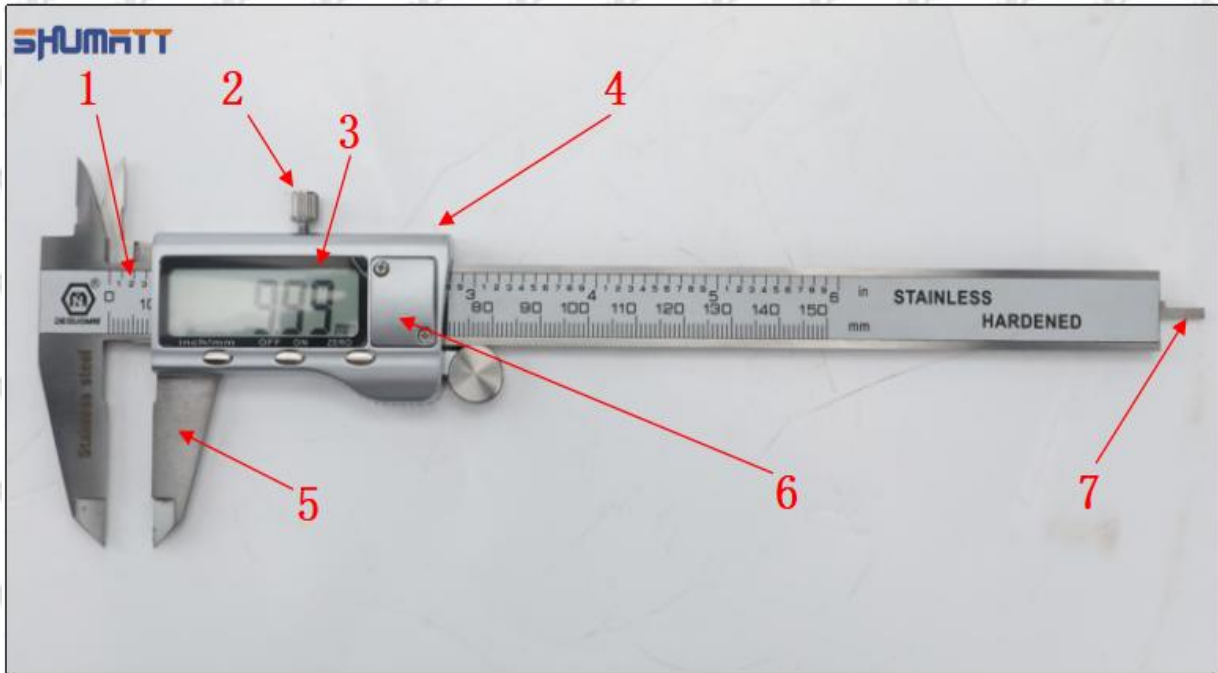
⚠ The control valve's plastic box is recyclable and can be reused.

⚠ VCI anti-rust bag is non-degradable, please dispose them properly after using.



**1.6. 095000-0801 Injector Control Valve 295040-1211 Thickness Measurement Tool's Introduction****(1) Electronic Vernier Caliper****● Technical Parameters**

1. Made of stainless steel.
2. Resolution: 0.01mm/0.001.
3. Set on zero at any location.

**● Parts' Name**

Pic No.1

1: Caliper Body	2: Caliper Frame Fastening Screw	3: LCD	4: Data Output Port
5: Data Output Port	6: Battery Cover	7: Depth Bar	/

**(2) Electronic Digital Display Micrometer****● Technical Parameters**

1. Range: 0-25mm, 25-50mm, 50-75mm, 75-100mm
2. Resolution: 0.001mm
3. Power: Voltage 1.5V button battery
4. Working Temperature: 0~+40℃
5. Storage Temperature: -20~+70℃
6. Environment Humidity: ≤80%

## ● Parts' Name



Pic No.2

1: Micro-tube	2:Ratchet Force Measuring Device	3: Data Output Port	4: Display Screen	5: mm Function Key
6: ON/OFF ZERO Function Key	/	/	/	/

**1.7. 095000-0801 Injector Control Valve 295040-1211 Thickness Measurement Methods****(1) Electronic Vernier Caliper**

1. Preparation: Clean all surfaces of the caliper with a dry soft cloth, please make sure there is a battery in the caliper before using it;
2. Press the OFF/ON button on the vernier caliper to turn on the caliper;
3. When you turn on the vernier caliper, sometimes there is data on the screen. This is because the caliper is not fully closed. You can roll the caliper with fingers to close it, and then press the ZERO button to return to zero;
4. Put the control valve into the caliper and press it tightly by rolling the button;
5. After tightening, use the other hand to tighten the upper button of the caliper to prevent looseness from affecting the accuracy of the reading. Last read the data.



Pic No.1

**⚠ Notice:** When using the electronic vernier caliper, be sure to return on zero port, otherwise there will be a large error in the measurement results!

## (2) Electronic Digital Display Micrometer

1. Preparation: Clean all surfaces of the caliper with a dry soft cloth, please make sure there is a battery in the caliper before using it;

2. Use of ON/OFF ZERO function key:

In the "off" state, short press the ON/OFF ZERO function key to start up, the micrometer is in the metric reading (shown on the right of the display "mm") mode and display the set value. If there is no set value, the initial value is displayed as "0".

In the power-on state, press and hold (more than 2 seconds) the ON/OFF ZERO function key to shut down.

In the power-on state, short press the ON/OFF ZERO function key, and the display returns to the set value or the initial value "0".

3. Use of "mm" function keys:

In the power-on state, short press the "mm" function key to realize the conversion of metric ("mm" is displayed on the right side of the display) and inch ("in" is displayed on the right side of the display) display mode.

In the power-on state, press and hold (more than 2 seconds) the "mm" function key to enter the setting value mode;

### Setting of set value:

Long press (more than 2 seconds) the "mm" key to make the first character flash, and short press the ON/OFF ZERO key to select any number from 0 to 9;

Short press the "mm" key, and jump to the next character to flash, use the same method to select all the characters, press and hold (more than 2 seconds) the "mm" key to complete the preset value,



then the character will no longer flash;

Once the setting value is set, it will last until the battery is removed or the battery is exhausted.

#### 4. Data Transfer Method:

Open the data output port cover, insert the data acquisition line (need to be purchased separately) into the outer micrometer, and connect the other end to the company's data acquisition adapter (need to be purchased separately) or connect to the computer.



Pic No.2

### 1.8. 095000-0801 Injector Control Valve 295040-1211 Warranty Instructions

#### (1) 095000-0801 Injector Control Valve 295040-1211 Warranty Conditions and Instructions

It is necessary to provide the pictures, videos of 295040-1211 control valve when the injector control valve is abnormal during use or the test report of 295040-1211 control valve inspection equipment as evidence to feedback to the salesman.

Abnormal conditions are properly explained such as: 1.Black smoke, 2. Engine shake, 3. Difficulty starting the engine, 4. Engine noise, 5. Oil leakage etc.

The above conditions may also be affected by incorrect installation of the fuel injector. If it is confirmed that it is product problem after being tested by our company, the injector control valve is within the scope of warranty.

#### (2) 095000-0801 Injector Control Valve 295040-1211 Warranty Coverage

After customer receives the 295040-1211 control valve within 15 days , customer can choose to replace it if there is a performance failure and the product has no appearance damage;

If the 295040-1211 control valve has performance problems during the warranty period (3 months), and it is confirmed to be product's problems after being tested, you can contact our salesmen to replace the same model or a reworked product with the same performance for free;

If the injector control valve is confirmed to be fault-free, it can only be repaired and it will be returned as original way.

#### (3) 095000-0801 Injector Control Valve 295040-1211 Out of Warranty Coverage

Damage to the control valve caused by assembly errors during assembly.



Out of warranty and not covered under warranty. Malfunction of the 295040-1211 control valve caused by high temperature, high pressure, humidity, rain, snow, saline-alkali ground, earthquakes, or other abnormal environments.

Damage to the 295040-1211 control valve caused by human error (throwing, strong magnetic field magnetization, arson).

Damage to the 295040-1211 control valve caused by issues not related to the design, technology, manufacturing, or quality of the 295040-1211 control valve.

Damage to the 295040-1211 control valve caused by system pressure exceeding the system's approved pressure.

The 295040-1211 control valve malfunction is caused by impurities (water, lead, aluminum powder, iron powder, sulfides) in the system fuel exceeding standard requirements.

The 295040-1211 control valve malfunction is also caused by improper installation (too much or too little torque) compared to the injector repair manual.

The 295040-1211 control valve malfunction is caused by improper installation angle compared to the injector repair manual.

The 295040-1211 control valve malfunction is caused by improper cleaning procedures compared to the injector repair manual.

The 295040-1211 control valve malfunction is caused by improper replacement of wear parts compared to the injector repair manual.

## **1.9. 095000-0801 Injector Control Valve 295040-1211 Manufacturer**

**Manufacturer:** Shenzhen Shumatt Technology Co., Ltd

## **1.10. 095000-0801 Injector Control Valve 295040-1211 Technical Support Obtaining Methods**

(1) 295040-1211 Control Valve Technical File:

visit <http://shumatt.com> to get the technical file.

(2) Injector Technical Videos

**Facebook:** Visit <https://www.facebook.com/hison.li> to get the technical videos, constantly follow can get more information.

**YouTube :** [https://www.youtube.com/channel/UCByvYBx7VjV\\_mAfxh\\_Hu-aw](https://www.youtube.com/channel/UCByvYBx7VjV_mAfxh_Hu-aw) to get the technical videos, constantly follow can get more information.

**Shumatt:** Visit <http://shumatt.com> to get the technical videos.

(3) Injector Information Query Software

TruckBook Parts EPC APP, Android/Apple App Store download and install, visit <http://shumatt.com> to get the download and installation tutorial

(4) Search The fuel injector test data through TruckBook Parts EPC APP.

## **2. 095000-0801 Injector Control Valve 295040-1211 Purchase and Delivery**

### **2.1. 095000-0801 Injector Control Valve 295040-1211 Purchase Payment Methods**

**Payment methods:** T/T, PayPal, Alipay, WeChat

▲ Please contact our salesmen for specific payment information.

## 2.2. 095000-0801 Injector Control Valve 295040-1211 Main Sales Markets

Injector control valve's main sales markets: Asia, Europe, North America, South America, Africa etc.

## 2.3. 095000-0801 Injector Control Valve 295040-1211 Declaration Requirements

Shumatt can assist customers to provide the following documents for import customs clearance: contract, invoice, packing list, bill of lading, insurance policy, certificate of origin, etc.

## 2.4. 095000-0801 Injector Control Valve 295040-1211 Shipping Ways

**Destination in China areas:** SF Express, Debon Express, the corresponding logistics company can be provided according to customer requirements in special cases.

**Destinations out of China's areas:** DHL, UPS, FedEx, TNT air, ocean or other shipping methods required by customers.

## 2.5. 095000-0801 Injector Control Valve 295040-1211 Lead time

**Lead time:** Send out within 3 – 7 working days after receiving payment ( Except for special products and special cases ) .

## 2.6. 095000-0801 Injector Control Valve 295040-1211 Logistics Time for Destination Out of China's Areas

**DHL Logistics Time :**

Country or Region of Departure	Hong Kong, China	Other Countries or Regions of Asia	Australia and New Zealand	Europe	America	Other Countries
China's Mainland	7 Days	7 Days	8 Days	8 Days	8-12 Days	7-10 Days

**UPS Logistics Time: Country or Region of Departure: China's Mainland**

Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time
Japan	3 Days	UK	5-7Days	Egypt	5-7 Days
Turkey	5-7 Days	Singapore	3 Days	Switzerland	5-7 Days
Bahrain	5-7 Days	Latvia	7-10 Days	New Zealand	7-10 Days
Sri Lanka	5-7 Days	Thailand	3 Days	Austria	5-7 Days
Romania	5-7 Days	Vietnam	3-5 Days	Estonia	5-7 Days
Malaysia	3-5 Days	Israel	5-7 Days	Mexico	7-10 Days
France	5-7 Days	America	5-7 Days	United Arab Emirates	5-7 Days
Italy	5-7 Days	Netherlands	5-7 Days	Bengal	7-10 Days
Lebanon	5-7 Days	Philippine	3-5 Days	Greece	7-10 Days
South Korea	3 Days	Spain	5-7 Days	Myanmar	5-7 Days
Canada	5-7 Days	Germany	5-7 Days	Saudi Arabia	7-10 Days
Portugal	5-7 Days	Australia	5-7 Days	South Africa	7-10 Days
Denmark	5-7 Days	Belgium	5-7 Days	Ukraine	7-10 Days
India	7-10 Days	Qatar	7-10 Days	Poland	5-7 Days
Indonesia	3-5 Days	Morocco	7-10 Days	Pakistan	7-10 Days
Kuwait	7-10 Days	/	/	/	/

▲ The logistics time is for reference only, subjects are according to the actual arrival.

## 2.7. 095000-0801 Injector Control Valve 295040-1211 Packing

**Domestic express packaging:** Usually wrapped in waterproof scotch tape, such as picture No.1.

**International express packaging :** Wrapped with waterproof yellow tape After wrapping the black protective film, such as picture No. 2.

**Pallet Shipping :** Use fumigation free and recycling trays that meet export requirements, and use white wrapping protective film to wrap and bind with cable ties for the outside, such as picture No. 3, also, the products can be packaged according to customers' requirements.

▲ The packing tray is made of plastic and can be recycled.

▲ Transparent tape, yellow tape, black wrapping protective film, white wrapping protective film are non-degradable materials, please dispose of them properly.

▲ Minors are prohibited from using transparent tape, yellow tape, black wrapping protective film, and white wrapping protective film to avoid personal injury.



Pic No. 1

**Domestic express packaging:**

Wrapped with Transparent tape



Pic No. 2

**International express packaging:**

Wrapped with yellow tape after wrapping black protective film



Pic No. 3

**Pallet Shipping:** Use pallet that meet export requirements, and use white wrapping protective film to wrap and bind with cable ties



**3. 095000-0801 Injector Control Valve 295040-1211 Storage Standard****(1) Choose a suitable storage place**

The warehouse and cargo yard where 295040-1211 control valve is stored should be kept clean and dry, and away from the factory buildings that generate harmful gases and dust; do not mix with acid, alkali, salt and other substances; the storage place should have a good drainage system; the cargo yard should be flattened with gravel or furnace ash etc. to enhance the water permeability of the surface layer to keep the reservoir area dry.

**(2) Strict requirements of warehousing**

Strict inspections should be carried out when 295040-1211 control valves are put into storage, the surface cleaning work should be done well to remove water traces, oil stains, ash and other dirt, remove the rust and do anti-rust treatment in time. Packaged injectors must be protected from damage.

**(3) Keep the warehouse dry and preventing moisture**

The relative humidity is usually below 70% for 295040-1211 control valve placed in the room, and the corrosion of the injector Control Valve is significantly reduced.

Injector control valves must be stored in the warehouse, and they are forbidden to store in the same warehouse with commodities with high water content.

**(4) Stack Properly**

After 295040-1211 control valve is exposed to rain, the corrosion rate will increase significantly. The purpose of sealing is to isolate the injector control valve from rainwater and humid air, so the warehouse window should be checked in time to avoid rainwater entering the warehouse

If the 295040-1211 control valve package is damaged, it should be repaired or replaced; when the package is damp, the packaging material should be dried; if the original anti-corrosion and oil applied at the factory is found to be damaged or dried up, it should be cleaned and re-applied oil in time.

▲ It is forbidden to leave 295040-1211 control valve exposed in the air for a long time.

▲ It is forbidden to store acid, alkali, salt and other substances together with 295040-1211 control valve.

▲ The unpacked 295040-1211 control valve must be rust-proof during secondary storage.

**4. Company Information**





## 4.1. Company Introduction


**Chinese Name:** 深圳市舒马特科技有限公司

**English Name:** Shenzhen Shumatt Technology Co., Ltd


 **Mob Phone/WeChat:** +86-13410541523


 **HK Telephone:** +852-67653519

 **Telephone:** +86-755-23215133


 **Email:** ruby@shumatt.com

 **Website:** www.shumatt.net

 **Shenzhen Office:** 11-12, Floor 14, Building 13, Qinchengda Building, Exit A, Honglang North Subway Station, Bao'an District, Shenzhen, China's Mainland

 **Shenzhen Office:** Room 428-430, Building B, Huafeng Zhigu Technology Industrial Park, Exit B, Fuyong Metro Station, Bao'an District, Shenzhen, China's Mainland

 **Hong Kong Office:** Jianfa Street Industrial Zone, Tuen Mun, New Territories, Hong Kong, China

 **After-sales Service Address:** Please contact our salesmen to obtain and provide the corresponding product maintenance reasons ( Reference : [1.8. 095000-0801 Injector Control Valve 295040-1211 Warranty Instructions](#) )

## 5.2. Sales-men's Contact Information

No.	Name	WeChat/WhatsApp	Email
1	Ruby	+86-13410541523	ruby@shumatt.com
2	Ivy	+86-18025299821	sales@shumatt.com
3	Rebecca	+86-18025349821	sales01@shumatt.com
4	Janny	+86-18028749821	sales02@shumatt.com
5	Sam	+86-13316859821	Sales8@shumatt.com
6	Natalie	+86- 18938945856	sales15@shumatt.com
7	Ada	+86-1342286353	sales5@shumatt.com
8	Hison Li	+86-18318811871	web@shumatt.com
9	Mecca	+86-18938948618	sales11@shumatt.com
10	Eric	+86 18319033618	sales3@shumatt.com
11	Wayne ( Joaquín en español )	+86-13316959821	wayne@shumatt.com
12	Sylvia	+86 18312499884	sales6@shumatt.com

Visit <http://shumatt.com> to obtain the latest information of salesmen

Mob/WhatsApp: +86 13410541523

Email : [ruby@shumatt.com](mailto:ruby@shumatt.com)

© 2026 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133

Website : [www.shumatt.com](http://www.shumatt.com)

## 6. Copyright Statement

The copyright of any contents (including but not limited to parameters, data, text, charts, images, sounds or videos, etc.) provided in "095000-0801 Injector Control Valve 295040-1211 Technical File" belongs to Shenzhen Shumatt Technology Co., Ltd. Without the prior written permission of Shenzhen Shumatt Technology Co., Ltd., any users are not allowed to modify the contents in "095000-0801 Injector Control Valve 295040-1211 Technical File" in any way. At the same time, any conditions to spread, re-post, display the contents of "095000-0801 Injector Control Valve 295040-1211 Technical File" should indicate source from Shenzhen Shumatt Technology Co., Ltd., Any actions failure to follow above conditions to use "095000-0801 Injector Control Valve 295040-1211 Technical File" will violate the "Copyright Law of the People's Republic of China" and other laws and regulations and the provisions of relevant international conventions.