

# 23670-E0090 Injector Orifice Plate 07# Technical File

SKU1 G1Z11000000007

SKU2 G1L320000007DZ

SKU3 G1L32950400700

SKU4 G1N12950400700

SKU5 G1Z172950400700







# 23670-E0090 Injector Orifice Plate 07# Technical File

## Content

1. 23670-E0090 Injector Orifice Plate 07# Introduction	2
1.1. 23670-E0090 Injector Orifice Plate 07# Basic Information	2
1.2. 23670-E0090 Injector Orifice Plate 07# Common Part Number	2
1.3. 23670-E0090 Injector Orifice Plate 07# Specifications and Dimensions	2
1.4. 23670-E0090 Injector Orifice Plate 07# Quality Control	2
1.5. 23670-E0090 Injector Orifice Plate 07# Customized Service	3
1.6.23670-E0090 Injector Orifice Plate 07# Packing List	4
1.7. 23670-E0090 Injector Orifice Plate $$ $$ $$ $$ Lettering Detail's Display	5
1.8.23670-E0090 Injector Orifice Plate 07# Thickness Measurement Tool's Introduction	9
1.9.23670-E0090 Injector Orifice Plate 07# Thickness Measurement Methods	10
1.10. 23670-E0090 Injector Orifice Plate 07# Warranty Instructions	12
1.11.23670-E0090 Injector Orifice Plate 07# Manufacturer	13
2. 23670-E0090 Injector Orifice Plate 07# Technical Support	13
2.1.23670-E0090 Injector Orifice Plate 07# Inspection and Semi Ball Inspection	13
2.2.23670-E0090 Injector Orifice Plate 07# Level of Damage Inspection	
2.3.23670-E0090 Injector Orifice Plate 07# Installation Steps	18
2.4.23670-E0090 Injector Orifice Plate 07# Technical Support Obtaining Methods	
3.23670-E0090 Injector Orifice Plate 07# Purchase and Delivery	32
3.1.23670-E0090 Injector Orifice Plate 07# Purchase Payment Methods	
3.2.23670-E0090 Injector Orifice Plate 07# Main Sales Markets	32
3.3.23670-E0090 Injector Orifice Plate 07# Declaration Requirements	33
3.4.23670-E0090 Injector Orifice Plate 07# Shipping Ways	
3.5.23670-E0090 Injector Orifice Plate 07# Lead time	33
3.6.23670-E0090 Injector Orifice Plate 07# Logistics Time for Destination Out of China's Areas	33
3.7.23670-E0090 Injector Orifice Plate 07# Packing	
4.23670-E0090 Injector Orifice Plate 07# Storage Standard	34
5. Company Information	
5.1. Company Introduction	36
5.2. Sales-men's Contact Information	
6. Copyright Statement	36

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>



# 23670-E0090 Injector Orifice Plate 07# Technical File

### 1. 23670-E0090 Injector Orifice Plate 07# Introduction

#### 1.1. 23670-E0090 Injector Orifice Plate 07# Basic Information

Title	China made new 23670-E0090 fuel Injector Orifice Plate's 07#
SKU1	G1Z1100000007
SKU2	G1L320000007DZ
SKU3	G1L32950400700
SKU4	G1N12950400700
SKU5	G1Z172950400700

### 1.2. 23670-E0090 Injector Orifice Plate 07# Common Part Number

#### (1) 23670-E0090 Injector Orifice Plate 07# Application to Car Model Information

Injector Part Number	ISUZU Car Model	ISUZU Car Model	OE Number	OE Number
23670-E0090	HINO TRUCK N04C-TR	23670-E0091	The The The	ant ant
Stor. Stor. Stor.	HINO TRUCK N04C-TS	the She She	2100 2500	Shr. Shr. Sh
SUNDAY SHADAY SHAD	HINO TRUCK N04C-TT	HEREN SIGNAL SIGN	SUL STREET, STREET,	SHOWL PHOUSE SH
SUMMET STATE SAME	TOYOTA DYNA N04C-TT	AND THE PERSON AND TH	DETT CARRIET CARRET	THE PROPERTY AND PARTY AND

#### (2) 23670-E0090 Injector Orifice Plate 07# Part Number Common Writing

07#, 7#, 07, 7, 295040-6120, 2950406120, 2950406120

#### 1.3. 23670-E0090 Injector Orifice Plate 07# Specifications and Dimensions

Injector Orifice Plate's Size: 2cm\*2 cm \*1 cm
Injector Orifice Plate's Box Size: 7cm \*7 cm \*2 cm
Injector Orifice Plate's Package Size: 8 cm \* 8cm
Injector Orifice Plate's Net Weight: 0.015kg
Injector Orifice Plate's Gross Weight: 0.03kg

Injector Orifice Plate's Quality: China Made Brand New

MOQ: 4 Pieces

#### 1.4. 23670-E0090 Injector Orifice Plate 07# Quality Control

#### (1) 23670-E0090 Injector Orifice Plate 07# Testing

All 23670-E0090 injector orifice plate 07# parts are subjected to A-hole flow test, Z-hole flow test, precision test, high temperature test, low temperature test, pressure test, leakage test, durability test, and various working condition tests.

#### (2) 23670-E0090 Injector Orifice Plate 07# Inspection

The factory inspection of 23670-E0090 injector orifice plate 07# is undergone three inspections - full inspection, random inspection, and batch inspection. Different brands of test benches are used to test 23670-E0090 injector orifice plate 07# for a total of no less than three times for factory inspection, and

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com

23670-E0090 injector orifice plate 07# installation testing environment are progressed in dust-free workshop.

## 1.5. 23670-E0090 Injector Orifice Plate 07# Customized Service

## (1) 23670-E0090 Injector Orifice Plate 07# Customized Service Range:

Meet the OEM manufacturers customized demands of orifice plate's lettering, orifice plate's thickness, orifice plate's packing box, orifice plate's anti-rust bag and label etc,.

#### (2) 23670-E0090 Injector Orifice Plate 07# Customized Items

No.	1	2
SALESTY	SHUMATT	SHUMATT
Image	MIT ET STALL OF STALL	A A
Name	Injector Orifice Plate's Front Lettering	Injector Orifice Plate's Side Lettering
Description	Orifice plate part number: 07#	
No.	215 215 215 215 215 215 215 215 215 215	State State 25 4 State 25 25
SHARATE BASE	SHUMATT	SHUMATT
Image	0-25mm 0.001mm	
Name	Injector Orifice Plate's Thickness	9-Grid Plastic Box
Description	Injector orifice plate's thickness range: 4.02mm∽4.108mm.	Prevent damage to the orifice plates during transportation
No.	5	6
SHOWN'S SHOW	SHUMATT	SHUMATT SPELIN FELL
Image	8	
ONDER'T ON		
Name	Neutral Injector Orifice Plate's Individual Box	Orifice Plate's 10pcs Packing Box
Description	Prevent damage to the orifice plates during transportation	Liwei orifice plate's 10PCS plastic box to prevent damage to the orifice plates during transportation

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd



7	8
SHUMATT	=HUMm11
	10
Injector Orifice Plate's Individual Box	Orifice Plate's 12pcs Packing Box
Liwei orifice plate's individual box	Greenpower orifice plate's 12PCS plastic box to prevent damage to the orifice plates during transportation
9	10
SHUMATT	SHUMATT
Shumatt Orifice Plate's Box	Orifice Plate's VCI Anti-Rust Bag
Shumatt orifice plate's plastic box to prevent damage to the orifice plates during transportation	9-grid orifice plate packaging box's blue VCI anti-rust bag, suitable for long-term storage of the orifice plate
11	20, 20, 30, 30, 30, 30,
SHUMATT  SHUMATT  ORFICE PLATE	SHOWELL SHOWELL SHOWELL SHOWELL SHOWELL SHOWELL
Province if province in province in the contract	SHERRILL SHERRILL SHERRILL SHERRILL SHE
Shumatt Label	/
PALS WINES WINES TOWNS THE STREET	PROPERTY AND A PROPERTY OF THE PARTY OF THE
	Injector Orifice Plate's Individual Box  Liwei orifice plate's individual box  9  Shumatt Orifice Plate's Box  Shumatt orifice plate's plastic box to prevent damage to the orifice plates during transportation  11

#### (3) 23670-E0090 Injector Orifice Plate 07# Customized Service Requirements:

Custom lettering of injector orifice plate are not less than 100 pieces.

Custom packing boxes of injector orifice plate are not less than 100 pieces.

The purchase of injector orifice plates are not less than 100 pieces.

When customized products involve the need of specific logo, the OEM manufacturer has to provide trademark authorization and the sample of logo image file.

▲ Once the customized 23670-E0090 injector orifice plate 07# is sold, it cannot be returned or exchanged if there is no quality problems.

#### 1.6.23670-E0090 Injector Orifice Plate 07# Packing List

(1) 23670-E0090 Injector Orifice Plate 07# Spare Parts List

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com



No.	1	2
Image	SHUMATT	
Name	Injector Orifice Plate	9-Grid Box
Description	Orifice plate part number: 07#	9-grid plastic box to prevent damage to the orifice plates during transportation. (10pcs or 12pcs packing box is optional)
No.	2/th 2/th 2/th 2/th	4
Image	SHUMATT	SHUMATT
Name	Injector Orifice Plate's Individual Box	Neutral VCI Anti - Rust Bag
Description	To prevent damage to the orifice plates during transportation. (liwei individual box is optional)	770 770 770 770 770 770

Minors are forbidden to use 23670-E0090 injector orifice plate 07# and orifice plate's box to avoid personal injury.

▲ The orifice plate's plastic box is recyclable and can be reused.

VCI anti-rust bag is non-degradable, please dispose them properly after using.

## 1.7. 23670-E0090 Injector Orifice Plate 07# Lettering Detail's Display

## (1) Orifice Plate's Lettering

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <a href="mailto:ruby@shumatt.com">ruby@shumatt.com</a>

© 2022 Shenzhen Shumatt Technology Co., Ltd





Pic No. 1

1: Oil Port Number	2: Grade Recognition Number	3: Manufacture Number	177 Last 1

## (2) Orifice Plate's Structure



Pic No. 2

4: Oil Inlet	5: Stabilizing Pin	6: Front of Oil	7: Mark Location
Story Story Story	21/20 21/20 21/20 21	Back-flow Hole	24gm 24gm 24g

# (3) 23670-E0090 Injector Orifice Plate 9# Liwei Orifice Plate's Multi-angle Pictures

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

# Shenzhe

# Shenzhen Shumatt Technology Co., Ltd




Mob/WhatsApp: +86 13410541523

Email: <a href="mailto:ruby@shumatt.com">ruby@shumatt.com</a>

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133

# (4) 23670-E0090 Injector Orifice Plate 07# Neutral Orifice Plate's Multi-angle Pictures

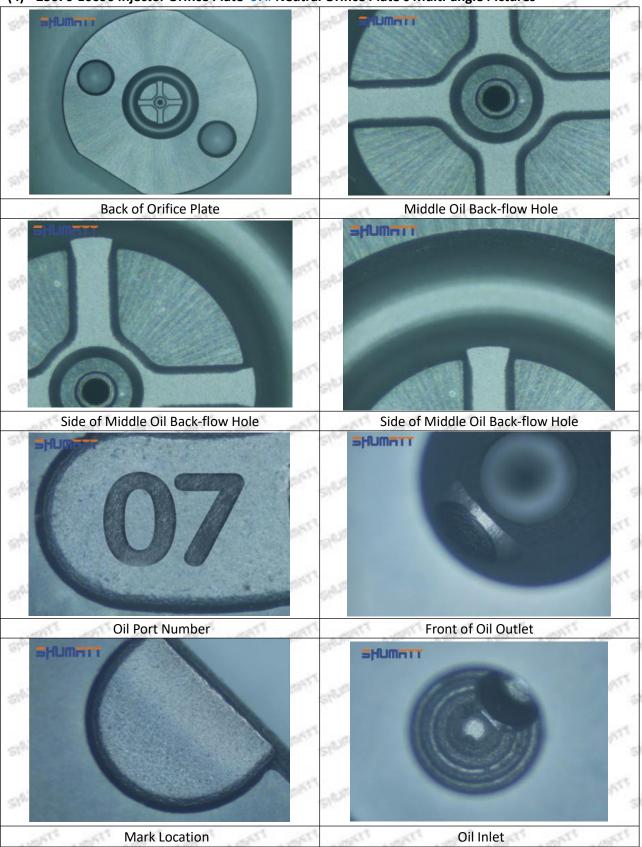

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd



### 1.8.23670-E0090 Injector Orifice Plate 07# Thickness Measurement Tool's Introduction

#### (1) Electronic Vernier Caliper

#### Technical Parameters

1. Made of stainless steel.

2. Resolution: 0.01mm/0.001.

3. Can set on zero at any location.

## Parts' Name



Pic No.1

L: Caliper Body 2: Caliper Frame Fastening Screw		3: LCD	4: Data Output Port
5: Data Output Port	6: Battery Cover	7: Depth Bar	/

#### (2) Electronic Digital Display Micrometer

#### Technical Parameters

1. Range: 0-25mm,25-50mm,50-75mm,75-100mm

2. Resolution: 0.001mm

3. Power: Voltage 1.5V button battery 4. Working Temperature: 0 \sim +40 °C 5. Storage Temperature: -20 \sim +70 °C 6. Environment Humidity: ≤80%

Parts' Name

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd





Pic No.2

1: Micro-tube	2:Ratchet Force	3: Data Output	4: Display	5: mm Function
	Measuring Device	Port	Screen	Key
6: ON/OFF ZERO Function Key	THE TRUTT	SPERMIT SPERMIT	AND THE PROPERTY	AUDITY SHADOTT

#### 1.9.23670-E0090 Injector Orifice Plate 07# Thickness Measurement Methods

#### (1) Electronic Vernier Caliper

- Preparation: Clean all surfaces of the caliper with a dry soft cloth, please make sure there is a battery in the caliper before using it;
- 2. Press the OFF/ON button on the vernier caliper to turn on the caliper;
- 3. When you turn on the vernier caliper, sometimes there is data on the screen. This is because the caliper is not fully closed. You can roll the caliper with fingers to close it, and then press the ZERO button to return to zero;
- Put the orifice plate into the caliper and press it tightly by rolling the button;
- 5. After tightening, use the other hand to tighten the upper button of the caliper to prevent looseness from affecting the accuracy of the reading. Last read the data.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com





Pic No.1

A Notice: When using the electronic vernier caliper, be sure to return on zero port, otherwise there will be a large error in the measurement results!

#### (2) Electronic Digital Display Micrometer

1. Preparation: Clean all surfaces of the caliper with a dry soft cloth, please make sure there is a battery in the caliper before using it;

#### 2. Use of ON/OFF ZERO function key:

In the "off "state, short press the ON/OFF ZERO function key to start up, the micrometer is in the metric reading (shown on the right of the display "mm") mode and display the set value. If there is no set value, the initial value is displayed as "0".

In the power-on state, press and hold (more than 2 seconds) the ON/OFF ZERO function key to shut down.

In the power-on state, short press the ON/OFF ZERO function key, and the display returns to the set value or the initial value "0".

#### 3. Use of "mm" function keys:

In the power-on state, short press the "mm" function key to realize the conversion of metric ("mm" is displayed on the right side of the display) and inch ("in" is displayed on the right side of the display) display mode.

In the power-on state, press and hold (more than 2 seconds) the "mm" function key to enter the setting value mode;

#### Setting of set value:

Long press (more than 2 seconds) the "mm" key to make the first character flash, and short press the ON/OFF ZERO key to select any number from 0 to 9;

Short press the "mm" key, and jump to the next character to flash, use the same method to select all the characters, press and hold (more than 2 seconds) the "mm" key to complete the preset value, then the character will no longer flash;

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com

Once the setting value is set, it will last until the battery is removed or the battery is exhausted.

#### Data Transfer Method:

Open the data output port cover, insert the data acquisition line (need to be purchased separately) into the outer micrometer, and connect the other end to the company's data acquisition adapter (need to be purchased separately) or connect to the computer.



Pic No.2

#### 1.10. 23670-E0090 Injector Orifice Plate 07# Warranty Instructions

#### (1) . 23670-E0090 Injector Orifice Plate 07# Warranty Conditions and Instructions

It is necessary to provide the pictures, videos of 23670-E0090 injector orifice plate 07# when the injector orifice plate is abnormal during use or the test report of 23670-E0090 injector orifice plate 07# inspection equipment as evidence to feedback to the salesman.

Abnormal conditions are properly explained such as: 1.Black smoke, 2. Engine shake, 3. Difficulty starting the engine, 4. Engine noise, 5. Oil leakage etc.

The above conditions may also be affected by incorrect installation of the fuel injector. If it is confirmed that it is product problem after being tested by our company, the injector orifice plate is within the scope of warranty.

#### (2) . 23670-E0090 Injector Orifice Plate 07# Warranty Coverage

After customer receives the 23670-E0090 injector orifice plate 07# within 15 days , customer can choose to replace it if there is a performance failure and the product has no appearance damage;

If the 23670-E0090 injector orifice plate 07# has performance problems during the warranty period (3 months), and it is confirmed to be product's problems after being tested, you can contact our salesmen to replace the same model or a reworked product with the same performance for free;

If the injector orifice plate is confirmed to be fault-free, it can only be repaired and it will be returned as original way.

#### (3) . 23670-E0090 Injector Orifice Plate 07# Out of Warranty Coverage

The 23670-E0090 injector orifice plate 07# is artificially damaged due to assembly errors during the process of assembling.

Tel: +8675523215133 Mob/WhatsApp: +86 13410541523

Email: ruby@shumatt.com Website: www.shumatt.com

The warranty period has expired.

23670-E0090 injector orifice plate 07# failure caused by high temperature, high pressure, humidity, rain and snow, saline-alkali land, earthquake, and used in abnormal environment.

23670-E0090 injector orifice plate 07# damage caused by man-made reasons (throwing, strong magnetic field magnetization, set fire).

23670-E0090 injector orifice plate 07# failure or injector damage caused by non-injector orifice plate's design, technology, manufacturing, quality and other issues.

I23670-E0090 injector orifice plate 07# failure due to system pressure exceeding system approved pressure.

23670-E0090 injector orifice plate 07# failure caused by impurities (water, lead, aluminum powder, iron powder, sulfide) in the system fuel exceeding the standard requirements.

23670-E0090 injector orifice plate 07# failure caused by not installing according to the tightening torque specified in the vehicle engine maintenance manual (the tightening torque is too large or too small).

23670-E0090 injector orifice plate 07# failure caused by not following the installation angle specified in the vehicle engine maintenance manual.

23670-E0090 injector orifice plate 07# failure caused by not following the cleaning requirements specified in the vehicle engine maintenance manual.

23670-E0090 injector orifice plate 07# failure caused by failure to replace consumable parts as specified in the vehicle engine maintenance manual.


#### 1.11.23670-E0090 Injector Orifice Plate 07# Manufacturer

Manufacturer: Shenzhen Shumatt Technology Co., Ltd

#### 2. 23670-E0090 Injector Orifice Plate 07# Technical Support

#### 2.1.23670-E0090 Injector Orifice Plate 07# Inspection and Semi Ball Inspection

(1) Magnify 500 times under the microscope to check whether there is indentation on the sealing surface and the oil outlet hole of the orifice plate, check whether there is wear, scratch, damage, rust, depression, semicircle in the center hole of the orifice plate.

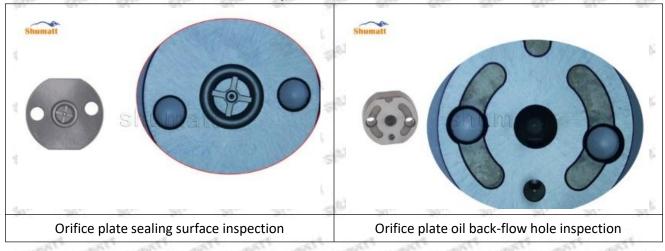

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>

# SHUMATT

# Shenzhen Shumatt Technology Co., Ltd



Orifice plate center deviation inspection



There is indentation on the side, the orifice plate needs to be replaced



There is indentation in the middle oil back-flow hole, the orifice plate needs to be replaced



The middle oil back-flow hole is semicircular, the orifice plate needs to be replaced

Website: www.shumatt.com

⚠ The blockage of the oil back-flow hole will cause small volume of the oil return, and the oil will not be injected.

⚠ When oil back-flow hole becomes larger, it causes the semi ball to be not tightly sealed, which causes the fuel injection pressure cannot be established, then the fuel injector cannot work normally.


⚠ The wear on orifice plate's surface causes gap to the semi ball, which leads to large volume of oil return, in serious cases, the pressure can not be built up and nozzle will spray oil directly.

The blockage of the oil inlet hole (side hole) will cause small amount of oil return, the blockage of oil inlet side hole will cause the injector cannot build a pressure chamber, as a result, the injector cannot work normally.

(2) Magnified 500 times under the microscope, check the plane position of the semi ball, if there is any scratch, it is recommended to replace it.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

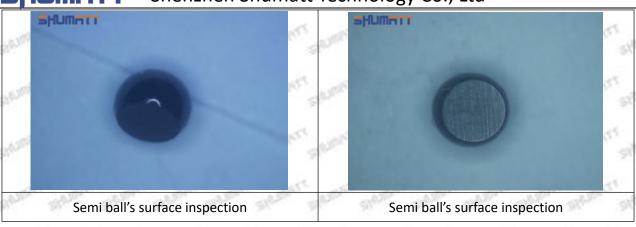

## 2.2.23670-E0090 Injector Orifice Plate 07# Level of Damage Inspection

## (1) Slight Damaged



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>

### (2) Moderate Damaged



Wear marks on edge



The misalignment of the semi ball causes damage to the orifice plate when installing it



The wear of the middle oil back-flow hole causes gap between semi ball and orifice plate, and causes the orifice plate to be washed out by high-pressure oil

-

#### (3) Highly Damaged



Obvious Wear marks on edge



The misalignment of the semi ball causes damage to the orifice plate when installing it

Mob/WhatsApp: +86 13410541523

Email: <a href="mailto:ruby@shumatt.com">ruby@shumatt.com</a>

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133

# SHUMATT

# Shenzhen Shumatt Technology Co., Ltd



The wear of the middle oil back-flow hole causes gap between semi ball and orifice plate, and causes the orifice plate to be washed out by high-pressure oil

/

### (4) More Pictures of Orifice Plate's Damage Details



The misalignment of the semi ball



Marks of the misalignment of the semi ball



The indentation of the misalignment of the semi ball



Washout marks caused by the presence of impurities in the fuel


Mob/WhatsApp: +86 13410541523

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133



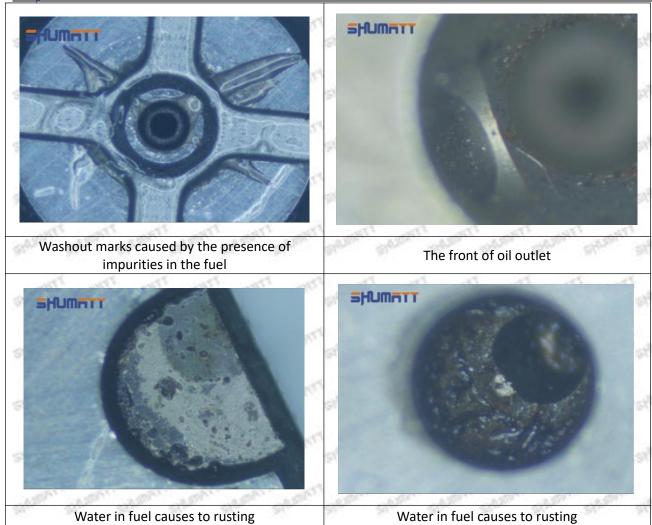

(5) Impact Classification According to The Degree of Damage to The Orifice Plate

Damage Type	Severe Damaged	Severe Damaged General Damaged		
Classification	Α	В	C	
Impact on Overall Performance	Cause the fuel injector to not work properly, damage the vehicle engine or cause serious loss	Cause the injector cannot work normally, the vehicle cannot start normally, and the vehicle stop working	Cause Excessive o return of injector and the vehicle engine shaking	
Impact on Features	Affect the normal operation of the engine	Affect the normal operation of the injector	Affect the fuel injection volume of the injector	
Impact on Safety of Use	Cause serious damage to the engine and cause safety accident	Cause serious damage to the injector and may cause safety accident	Cause serious damage to the injectors and the vehicle stop working	

#### 2.3.23670-E0090 Injector Orifice Plate 07# Installation Steps

(1) Before install 23670-E0090 injector orifice plate 07#, clean it in an ultrasonic cleaning machine for 3-5 minutes so that to make the dirt, anti-rust oil oxide, paraffin base, naphthenic base, intermediate base, salt, lead naphthenate, zinc naphthenate, sodium petroleum sulfonate, barium petroleum sulfonate, calcium petroleum sulfonate, tallow diamine trioleate and rosin amine shedding fall off.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>



- (2) Use compressed air to clean up the cleaning fluid attached to the surface of the cleaned orifice plate to meet the use standard.
- (3) When installing the orifice plate, install it according to the oil hole A on the orifice plate, and match A, B, C on the orifice plate with A, B, C on the injector house. See as Pic No. 1



Pic No. 1

(4) Put the orifice plate into the injector with the stabilizing pin inserted into the stabilizing hole, see as Pic



Pic No. 2

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Place the buffer lift measurement tool and dial gauge in the measuring tool (CRT220) at zero port for buffer stroke measurement, see as Pic No. 3



Pic No. 3

Buffer Stroke: When the solenoid valve is powered off, the spring force of the opened solenoid valve transfers to the center of the armature plate and drives the armature plate to go down. When the valve ball contacts the oil return hole in the center of the orifice plate, the oil back-flow hole is closed. However, the armature plate has to run down a certain distance under the inertia, and this distance is called the buffer stroke.

The normal range of the buffer stroke is 20-40 (um) microns.

(6) The measurement of buffer lift is in the normal range, within 20-40 (um) microns, see as Pic No. 4



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

20/38



Pic No. 4

A Notice: The buffer stroke is the distance between the plane A of the semi ball to the plane B of the lock nut. If it is lower than 20-40 (um) microns, grin the B plane to 20-40 (um) microns. If it is higher than 20-40 (um) microns, check worn parts and replace it.



Pic No. 5

(7) Install the air clearance lift measuring tool and dial gauge in the measuring tool (CRT220) and place it at zero port for air clearance measurement, see as Pic No. 6



Pic No. 6

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd



Air clearance measurement normal range value is 45-50 (um) microns.

(8) The measurement of air clearance is in the normal range, within 45-50 (um) microns, see as Pic No. 7



Pic No. 7

▲ Notice: The air gap is the distance between plane A and plane B at the top of the armature, if the gap is not within 45-50 (um) microns, please replace it.



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Pic No. 8

### (9) Install lock nut, see as Pic No. 9



Pic No. 9 (10) Install the (CRT230) 3-jaw tool inside the CRT029 on the lock nut, see as Pic No.10



Mob/WhatsApp: +86 13410541523 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133



(11) Rotate (CRT084) clockwise with a torque wrench to tighten the lock nut to 70-75Nm, see as Pic No.11



Pic No.11

(12) When installing the semi ball, it should be noted that the plane of the semi ball cannot be reversed, otherwise it may cause damage to the orifice plate, see as Pic No.12



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Pic No.12

(13) place the semi ball on the armature, Pic No.13



Pic No.13

(14) Put the armature with semi ball into the lock nut (Make sure that the armature buffer stroke and armature air clearance lift are within the normal range), see as Pic No.14



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Pic No.14

(15) Measure the thickness of the armature lift adjustment gasket, see as Pic No.15



Pic No.15

(16) Put the armature lift adjustment gasket into the solenoid valve, see as Pic No.16



Pic No.16

Mob/WhatsApp: +86 13410541523

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133



(17) Install the armature stroke measuring tool and dial gauge in the measuring tool (CRT220) and place it on zero to measure armature travel, see as Pic No.17



Pic No.17

The stroke of the armature also controls the final lifting position of the semi ball. The greater the stroke of the armature is lifted, the longer it will take for the return oil to rush in the orifice plate, which will cause the orifice plate to fail in a short time and the injector to fail to work normally. However, the stroke of the armature should not be too small, otherwise it will cause insufficient fuel injection, resulting in problems such as reduced engine power and engine shaking.

(18) The measurement of the solenoid valve's lift of the armature is 3.413, see as Pic No.18

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

27 / 38





Pic No.18 (19) Measure the armature travel of the injector housing end again, see as Pic No.19



Pic No.19

(20) Subtract the two data measured in step 17 and step 18 to get the normal range value of armature stroke between 60-65um. If the value is too large or too small, replace the armature lift according to the measurement results and adjust the thickness of the shim to make the armature stroke range reach the normal range, see as Pic No.20

28 / 38

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>



Pic No.20

(21) Put the solenoid valve spring adjustment shim into the solenoid valve, see as Pic No.21



Pic No.21

(22) Put the solenoid valve spring into the solenoid valve, see as Pic No.22

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Website: www.shumatt.com

Email: ruby@shumatt.com



Pic No.22

(23) Install the solenoid valve sealing ring on the fuel injector, see as Pic No.23



Pic No.23

(24) Install the solenoid valve on the fuel injector, If the solenoid valve is not replaced, install it according to

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Website: www.shumatt.com

Email: ruby@shumatt.com

the red mark. If there is a replacement solenoid valve, install it according to the standard angle which checked on Truck book Parts EPC APP, see as Pic No.24



Pic No.24

(25) Tighten the solenoid valve clockwise with a torque wrench (CRT084) to 25-35Nm, see as Pic No.25



Pic No.25

(a) Leak Test

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

31 / 38



Test Result:

1. The oil return is not sealed: there is no seal between the orifice plate and the semi ball.

May Lead To:

Oil return volume increased, oil leakage when the nozzle is in an open state, pressure cannot be established, and the injector fail to work, etc.

Solution:

Check or replace the orifice plate and Semi ball.

#### (b) VL Test

Test Result:

- 1. The maximum fuel injection volume is too large;
- 2. The maximum fuel injection volume is too small.

May Lead To:

- 1. The maximum fuel injection volume too large will cause the exhaust gas smoke and the fuel consumption will be high;
- 2. The maximum fuel injection volume too small will cause the engine powerlessness and delayed acceleration.

Solution:

- 1. When the maximum fuel injection volume is too large, make the armature stroke adjustment gasket or the solenoid valve spring adjustment gasket thin, and fine-tune the nozzle lift adjustment gasket;
- 2. When the maximum fuel injection volume is too small, make the armature stroke adjustment gasket or the solenoid valve spring adjustment gasket thick, and fine-tune the nozzle lift adjustment gasket.

#### 2.4.23670-E0090 Injector Orifice Plate 07# Technical Support Obtaining Methods

- (1) 23670-E0090 Injector Orifice Plate 07# Technical File, visit <a href="http://shumatt.com">http://shumatt.com</a> to get the technical file.
  - (2) Injector Technical Videos

**Facebook:** Visit <a href="https://www.facebook.com/hison.li">https://www.facebook.com/hison.li</a> to get the technical videos, constantly follow can get more information.

**YouTube:** <a href="https://www.youtube.com/channel/UCByvYBx7VjV">https://www.youtube.com/channel/UCByvYBx7VjV</a> mAfxh Hu-aw to get the technical videos, constantly follow can get more information.

**Shumatt:** Visit <a href="http://shumatt.com">http://shumatt.com</a> to get the technical videos.

(3) Injector Information Query Software

TruckBook Parts EPC APP, Android/Apple App Store download and install, visit <a href="http://shumatt.com">http://shumatt.com</a> to get the download and installation tutorial

(4) Search The fuel injector test data through TruckBook Parts EPC APP.

#### 3.23670-E0090 Injector Orifice Plate 07# Purchase and Delivery

#### 3.1.23670-E0090 Injector Orifice Plate 07# Purchase Payment Methods

**Payment methods:** T/T, PayPal, Alipay, WeChat

Please contact our salesmen for specific payment information.

#### 3.2.23670-E0090 Injector Orifice Plate 07# Main Sales Markets

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>

Injector orifice plate's main sales markets: Asia, Europe, North America, South America, Africa etc.

#### 3.3.23670-E0090 Injector Orifice Plate 07# Declaration Requirements

Shumatt can assist customers to provide the following documents for import customs clearance: contract, invoice, packing list, bill of lading, insurance policy, certificate of origin, etc.

#### 3.4.23670-E0090 Injector Orifice Plate 07# Shipping Ways

Destination in China areas: SF Express, Debon Express, the corresponding logistics company can be provided according to customer requirements in special cases.

Destinations out of China's areas: DHL, UPS, FedEx, TNT air, ocean or other shipping methods required by customers.

#### 3.5.23670-E0090 Injector Orifice Plate 07# Lead time

Lead time: Send out within 3 – 7 working days after receiving payment (Except for special products and special cases).

## 3.6.23670-E0090 Injector Orifice Plate 07# Logistics Time for Destination Out of China's Areas **DHL Logistics Time:**

Country or Region of Departure	Hong Kong, China	Other Countries or Regions of Asia	Australia and New Zealand	Europe	America	Other Countries
China's Mainland	7 Days	7 Days	8 Days	8 Days	8-12 Days	7-10 Days

#### UPS Logistics Time: Country or Region of Departure: China's Mainland

Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time
Japan	3 Days	UK	5-7Days	Egypt	5-7 Days
Turkey	5-7 Days	Singapore	3 Days	Switzerland	5-7 Days
Bahrain	5-7 Days	Latvia	7-10 Days	New Zealand	7-10 Days
Sri Lanka	5-7 Days	Thailand	3 Days	Austria	5-7 Days
Romania	5-7 Days	Vietnam	3-5 Days	Estonia	5-7 Days
Malaysia	3-5 Days	Israel	5-7 Days	Mexico	7-10 Days
France	5-7 Days	America	5-7 Days	United Arab Emirates	5-7 Days
Italy	5-7 Days	Netherlands	5-7 Days	Bengal	7-10 Days
Lebanon	5-7 Days	Philippine	3-5 Days	Greece	7-10 Days
South Korea	3 Days	Spain	5-7 Days	Myanmar	5-7 Days
Canada	5-7 Days	Germany	5-7 Days	Saudi Arabia	7-10 Days
Portugal	5-7 Days	Australia	5-7 Days	South Africa	7-10 Days
Denmark	5-7 Days	Belgium	5-7 Days	Ukraine	7-10 Days
India	7-10 Days	Qatar	7-10 Days	Poland	5-7 Days
Indonesia	3-5 Days	Morocco	7-10 Days	Pakistan	7-10 Days
Kuwait	7-10 Days	Par Shirm Shirm	Bless Styles	all all all	SKy SK

The logistics time is for reference only, subjects are according to the actual arrival.

#### 3.7.23670-E0090 Injector Orifice Plate 07# Packing

Domestic express packaging: Usually wrapped in waterproof scotch tape, such as picture No.1.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

33 / 38


**International express packaging:** Wrapped with waterproof yellow tape After wrapping the black protective film, such as picture No. 2.

**Pallet Shipping:** Use fumigation free and recycling trays that meet export requirements, and use white wrapping protective film to wrap and bind with cable ties for the outside, such as picture No. 3, also, the products can be packaged according to customers' requirements.

The packing tray is made of plastic and can be recycled.

**A** Transparent tape, yellow tape, black wrapping protective film, white wrapping protective film are non-degradable materials, please dispose of them properly.

A Minors are prohibited from using transparent tape, yellow tape, black wrapping protective film, and white wrapping protective film to avoid personal injury.

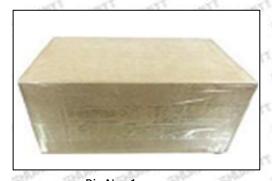

Pic No. 1

Domestic express packaging:

Wrapped with Transparent tape





Pic No. 2

International express packaging:

Wrapped with yellow tape after wrapping black protective film

**Pallet Shipping:** Use pallet that meet export requirements, and use white wrapping protective film to wrap and bind with cable ties

### 4.23670-E0090 Injector Orifice Plate 07# Storage Standard

## (1) Choose a suitable storage place

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133
Email: ruby@shumatt.com Website: www.shumatt.com

The warehouse and cargo yard where 23670-E0090 injector orifice plate 07# is stored should be kept clean and dry, and away from the factory buildings that generate harmful gases and dust; do not mix with acid, alkali, salt and other substances; the storage place should have a good drainage system; the cargo yard should be flattened with gravel or furnace ash etc. to enhance the water permeability of the surface layer to keep the reservoir area dry.

#### (2) Strict requirements of warehousing

Strict inspections should be carried out when 23670-E0090 injector orifice plate 07# are put into storage, the surface cleaning work should be done well to remove water traces, oil stains, ash and other dirt, remove the rust and do anti-rust treatment in time. Packaged injectors must be protected from damage.

#### (3) Keep the warehouse dry and preventing moisture

The relative humidity is usually below 70% for 23670-E0090 injector orifice plate 07# placed in the room, and the corrosion of the injector orifice plate is significantly reduced.

Injector orifice plates must be stored in the warehouse, and they are forbidden to store in the same warehouse with commodities with high water content.

#### (4) Stack Properly

After 23670-E0090 injector orifice plate 07# is exposed to rain, the corrosion rate will increase significantly. The purpose of sealing is to isolate the injector orifice plate from rainwater and humid air, so the warehouse window should be checked in time to avoid rainwater entering the warehouse

If the 23670-E0090 injector orifice plate 07# package is damaged, it should be repaired or replaced; when the package is damp, the packaging material should be dried; if the original anti-corrosion and oil applied at the factory is found to be damaged or dried up, it should be cleaned and re-applied oil in time.

▲ It is forbidden to leave 23670-E0090 injector orifice plate 07# exposed in the air for a long time.

▲ It is forbidden to store acid, alkali, salt and other substances together with 23670-E0090 injector orifice plate 07#.

▲ The unpacked 23670-E0090 injector orifice plate 07# must be rust-proof during secondary storage.

#### 5. Company Information



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

© 2022 Shenzhen Shumatt Technology Co., Ltd

Email: ruby@shumatt.com

### 5.1. Company Introduction

Chinese Name: 深圳市舒马特科技有限公司

English Name: Shenzhen Shumatt Technology Co., Ltd

☐ Mob Phone/WeChat: +86-13410541523

☐ **HK Telephone**: +852-67653519

**Telephone:** +86-755-23215133

Email: ruby@shumatt.com

Website: www.shumatt.net

Shenzhen Office: 11-12, Floor 14, Building 13, Qinchengda Building, Exit A, Honglang North Subway Station, Bao'an District, Shenzhen, China's Mainland

Shenzhen Office: Room 428-430, Building B, Huafeng Zhigu Technology Industrial Park, Exit B, Fuyong Metro Station, Bao'an District, Shenzhen, China's Mainland

Hong Kong Office: Jianfa Street Industrial Zone, Tuen Mun, New Territories, Hong Kong, China

After-sales Service Address: Please contact our salesmen to obtain and provide the corresponding product maintenance reasons (Reference: 1.10. 23670-E0090 Injector Orifice Plate 07# Warranty Instructions)

### 5.2. Sales-men's Contact Information

			Facebook	YouTube
Ruby	+86-13410541523	ruby@shumatt.com	Hison Li	Hison Li
lvy	+86-18025299821	sales@shumatt.com	Ivy Shumatt	Shumatt IVY
Rebecca	+86-18025349821	sales01@shumatt.com	Rebecca SHUMATT	SHUMATT Rebecc
Janny	+86-18028749821	sales02@shumatt.com	Janny shumatt	Janny Shumatt
Sam	+86-13316859821	Sales8@shumatt.com	Shumatt Sam	Sam Shumatt
Natalie	+86- 18938945856	sales15@shumatt.com	Shumatt Natalie	Lin Natalie
Ada	+86-1342286353	sales5@shumatt.com	Shumatt Ada	Ada Shumatt
Hison Li	+86-18318811871	web@shumatt.com	Hison Li	Hison Li
Mecca	+86-18938948618	sales11@shumatt.com	Shumatt Mecca	Shumatt Mecca
Eric	+86 18319033618	sales3@shumatt.com	Story Story	51° 51'
Wayne ( Joaquín en español )	+86-13316959821	wayne@shumatt.com	Shumatt Wayne	Wayne Shumatt
Sylvia	+86 18312499884	sales6@shumatt.com	1000	P. 100
35" 35" 3	Visit http://shumatt.com to ob	tain the latest information of salesi	men	210 210
	Ivy Rebecca  Janny Sam Natalie Ada Hison Li Mecca Eric Wayne ( Joaquín en español ) Sylvia	Ivy     +86-18025299821       Rebecca     +86-18025349821       Janny     +86-18028749821       Sam     +86-13316859821       Natalie     +86- 18938945856       Ada     +86-1342286353       Hison Li     +86-18318811871       Mecca     +86-18938948618       Eric     +86 18319033618       Wayne ( Joaquín en español )     +86-13316959821       Sylvia     +86 18312499884	Ivy         +86-18025299821         sales@shumatt.com           Rebecca         +86-18025349821         sales01@shumatt.com           Janny         +86-18028749821         sales02@shumatt.com           Sam         +86-13316859821         Sales8@shumatt.com           Natalie         +86-18938945856         sales15@shumatt.com           Ada         +86-1342286353         sales5@shumatt.com           Hison Li         +86-18318811871         web@shumatt.com           Mecca         +86-18938948618         sales11@shumatt.com           Eric         +86 18319033618         sales3@shumatt.com           Wayne ( Joaquín en español )         +86-13316959821         wayne@shumatt.com           Sylvia         +86 18312499884         sales6@shumatt.com	Ivy         +86-18025299821         sales@shumatt.com         Ivy Shumatt           Rebecca         +86-18025349821         sales01@shumatt.com         Rebecca SHUMATT           Janny         +86-18028749821         sales02@shumatt.com         Janny shumatt           Sam         +86-13316859821         Sales8@shumatt.com         Shumatt Sam           Natalie         +86-18938945856         sales15@shumatt.com         Shumatt Natalie           Ada         +86-1342286353         sales5@shumatt.com         Shumatt Ada           Hison Li         +86-18318811871         web@shumatt.com         Hison Li           Mecca         +86-18938948618         sales11@shumatt.com         Shumatt Mecca           Eric         +86 18319033618         sales3@shumatt.com         Shumatt Wayne           Wayne (Joaquín en español)         +86-13316959821         wayne@shumatt.com         Shumatt Wayne

## 6. Copyright Statement

The copyright of any contents (including but not limited to parameters, data, text, charts, images, sounds or videos, etc.) provided in "23670-E0090 Injector Orifice Plate "07# Technical File" belongs to Shenzhen Shumatt Technology Co., Ltd. Without the prior written permission of Shenzhen Shumatt Technology Co., Ltd., any users are not allowed to modify the contents in "23670-E0090 Injector Orifice

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>



Plate 07# Technical File" in any way. At the same time, any conditions to spread, re-post, display the contents of "23670-E0090 Injector Orifice Plate 07# Technical File" should indicate source from Shenzhen Shumatt Technology Co., Ltd., Any actions failure to follow above conditions to use "23670-E0090 Injector Orifice Plate 07# Technical File" will violate the "Copyright Law of the People's Republic of China" and other laws and regulations and the provisions of relevant international conventions.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email : <a href="mailto:ruby@shumatt.com">ruby@shumatt.com</a>
Website : <a href="mailto:www.shumatt.com">www.shumatt.com</a>
© 2022 Shenzhen Shumatt Technology Co., Ltd

37 / 38